



**With GPS the
world between
your hands**

User Manual

بيت ساحور- شارع YMCA

تلفاكس: 022759898

جوال: 0598939935

www.palgps.com

info@palgps.com

Please read this manual before you start using this device

Thanks for purchasing our product. Please read this manual carefully before starting to use this device. When you use this device, you are supposed to learn well of this product.

The information in this manual has been verified for its accuracy. But no liability will be applied for the correctness of mapping data of navigation, technical and/or editorial interpretation or illustration, or the printing and translation of this manual, nor liable for any consequence or incidental damages caused by using this manual.

This device is a complicated technical product consisting of OS and third party software. The manufacturer has paid sufficient attention to and fulfill its duty in its hardware manufacture processing and in development and/or application of the software so as to ensure the device work properly. If there is any malfunction or defective of the device, the manufacturer will provide a warranty for the congenital quality problem, but not covering for any loss or damage of property, or any consequence caused by or related to using this device.

The navigation software and mapping data is provided by a third party. Its copyright is protected by laws. A User can only use on this device, any copying or application of the software for other purpose is not allowed. No explicit and/or implicit guarantee or assurance will be applicable for the validity, integrity, correctness, accuracy of mapping data for navigation used on this device, nor liability for any loss, damage, and/or any consequence caused by or related to defective mapping data or software used on this device.

The copyright of this manual is owned by the company and protected by laws. Any copy or translation of whole or part of its content, including words, figures, signs, phonetic index, etc., is only allowed for the individual customer's reference, but not for public circulation, or other legal and/or commercial purpose. The company reserves the right for final interpretation of this manual.

General tips for GPS application

The following content is tips for GPS device application and operation. Please read it before starting use of the GPS device, so that you may make a better use of the GPS device.

While the GPS device is working, it receives signal from satellites for positioning. The signal from satellite may not be received, or be weakened in room, nearby some big buildings, or under overhead bridges.

When the GPS device is receiving satellite signals, you will get signals from different satellites when you are in different places, this is called "Satellite Path", a "Satellite Path" only covers a range of 300 KM. If a "Satellite Path" is defined at place A, then turn off the device and move to another place beyond 300 KM away from A, the device is under another "Satellite Path", At this moment, the device needs to search for satellite signal again. To track the new "Satellite Path", this will take quite a long time. To save time for this searching, you may click "GPS Reset" button in menu of "GPS Testing" to clear the previous "Satellite Path".

It will be difficult and taking more time to catch positioning signal from satellite during high speed driving. It is suggested to search the positioning signal by stopping your car for a better and safer effect.

While charging the device, please only use the travel charger or car charger equipped by the manufacturer in its original package. Other chargers may cause damage to this device, and this damage is not covered by our warranty.

Features:

Professional portable navigation system, UI design for mobile application, convenient operation

Most popular Windows OS, World class CPU

TF card of extensible capacity for mapping data, MP4 video, MP3 music, Photo, and personal files

Map for major large and medium scale cities, detailed mapping data, real voice guidance, and automatic smooth switching

Built-in high sensitive GPS receiving module and antenna, Faster GPS signal receiving and more accurate positioning

Prompt and accurate positioning applicable for GPS data collection, e.g. Area measuring

Prompt response for both cold and warm start; Re-capture of GPS signal just in 1 second on average, Accuracy of positioning: no more than 10 meters; Accuracy of timing: no more than 1 **microsecond Embedded** Organizer/Calendar, personalized friendly touch panel handwriting control, record and plan personal schedule

Multimedia entertainment: Flash display, MP3 music, MP4 video, Photo viewing

Scientific calculation: embedded calculator, a good business assistant

Personalized function setting: Language selection, Backlight brightness adjustment; Power management, Coordination calibration.

A user friendly feature is GPS "hold on". With this feature, you may use the device for other applications, like music, e-Book, except for Flash, by pressing Return button on the device to switch GPS application to background and keep it running without exiting **from GPS** application during the same time.

Warnings:

Please install the device in a right way to avoid driver's sight and airbag to be hindered. Any loss or damage of product, passengers, or other property caused by mistakes of mounting or installing of the device will be not covered within the warranty and not be **the responsibility** of the manufacturer.

Please not put on earphone and operate the device when you drive or ride a bike to ensure your safety.

Please consult with airline crew for application of the device if you want to use it during flight.

Please keep the device far away from strong magnetic field which may cause damage or malfunction to the device.

Please protect the device from being dropped, shocked or scratched on or by hard objects to avoid possible damages (scratches on the device face, loose contact of the battery, data loss or other hardware part broken) to the device.

Please not use earphone with a continuous and large volume for long time, set the volume at a moderate loudness and use it not for a long time to avoid possible damage to your ear audibility.

Please not use chemical solution or cleaner to clean the device to avoid possible damage to the paint and polish of its surface.

When the device is used as a mobile storage device, please follow right procedures of file management operation to copy or transfer files. The warranty does not cover any mistake, or damage, or loss of files

It will be better for you to make a backup copy of your personal files in the device into your PC or laptop in time

It is prohibited to use higher voltage power supply, to bent or squeeze the power cord with big force so as to avoid possible damage and overheat resulting in fire

Never use wet hands to pull out or plug in the power plug to avoid possible electric shock

Not use the device in an environment over 60°C, or below -10°C, and with high humidity as well.

The content of this manual is subject to definition, or interpretation, or modification from time to time for improvement on features and function without prior notice.

Illustrations on screen display: System UI (Projector Screen)



Under this UI, click icon down the screen to enter the function page.

Secondary UI (Projector Screen)



In this interface, click the icons on the screen to enter the corresponding functions; and click the arrow on the right bottom to turn the page. There will be an animation effect when turning the page.

Battery Status Icon:



Full=====>Drained

When the battery is at low power level, please charge it immediately to ensure the device work normally.

Charging:

Warnings for charging:

1. A new battery may be empty and not charged before you get the device.
2. To achieve the best performance of the battery, it is better to charge it up to 8 hours in the first three times, but not over 16 hours.
3. In normal charging with DC charger, please make sure to charge it for 2 – 2.5 hours to get it fully charged. A new battery will reach its best performance after a number cycle of charging and discharging. If the device is not used for long time, it is

better to charge it to full capacity every 2 or 3 months during storage. If not using the device for a long time, it is wise to take out the battery.

 
Charger Application:

DC Charger:

Take out the DC charger, plug it into the wall outlet with AC 220V (100V~240V), then plug in the DC jack into the device DC-in jack. (see the illustration below).

Car Lighter Charger:

Please insert the car charger into car cigarette lighter jack, and then plug into the USB jack (see the illustration below).

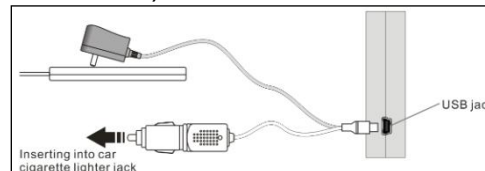

When you use car charger, please start car engine first, then connect it to the device to avoid possible damage to the device due to overloaded pulse current during ignition.

Please pull it out when you stop the engine, and plug it in again after next ignition.




Power On/Off the device

In power off status, slide the power switch to "ON" position to turn on the device, then the OSD will be displayed on screen.

Sleeping & Power –off

In power-on mode, press the power button on the device for 3-5 seconds then the sleeping mode or confirmation for power-off screen will display as follows:



In this UI click the button  will be in sleeping mode, click the button  will power off, click the button  to exit the UI and back to normal. operation.

Waking -up from the sleeping



When in sleeping mode, a short press on the power-on button of the device will wake up the system.

 
When in sleeping mode, all the procedure in operation will pause but will back to normal status after waking up.



FLASH Play

This is for Flash file playing.


Operation:

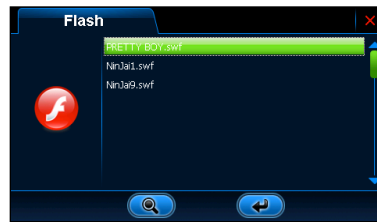 On system main menu, click  into media player Interface, and then click  into video play function. Display of UI for file selection:







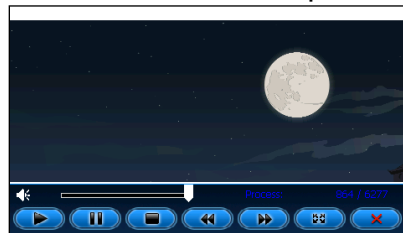





on this UI, click  button to search Flash files not in selected folder; click  button to close this window and exit Flash playing mode;

double click, or select then click  button to open this selected file.



Control buttons in playing mode:

-  : Play, in Pause or Stop mode, press this button to play;
-  : Pause, in Play mode, pressing this button to pause;
-  : Stop, in Play mode, pressing this button to stop;
-  : Fast Forward, in Play mode, pressing this button to get fast forward once;
-  : Fast Retreat, in Play mode, pressing this button to fast retreat once;
-  : Full Screen, pressing this button for full screen play;
-  : Return, pressing this button to return back to system main menu from playing mode;



 : Sound Settings, Click the button to change into mute, in which status the sound icon will change to  click the mute icon to back to its normal status and the sound icon will back to  at the same time.

 
In full screen, tool bar will be hidden at screen bottom; you may get it by tapping on the screen.




Video Playback

This feature is for video file playing, with the formats: AVI, MPEG, MPG, ASX, DAT, ASF and WMV.

Operation:

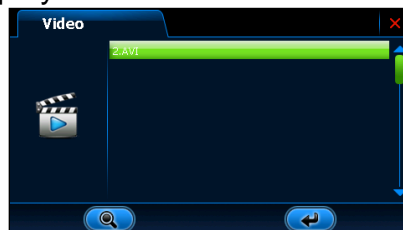
On system main menu, click  into media player Interface, and then click  into video play function. Display of UI for file selection:





 
On this UI, click  button to search video files not listed in the appointed video file folder; Click  button to close and exit from Video Playback application; Double click or select and click  button to open and play this file.

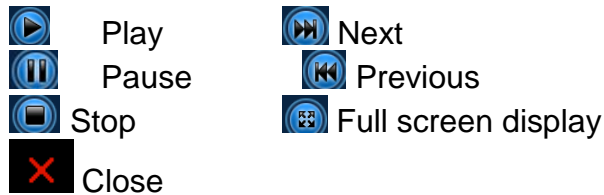

UI and button definition:





 
 Play Progression, drag to a point to start play  Volume tune, click anterior  to set into mute status, click it again to resume
In full screen display, the tool bar at screen bottom will be hidden; you can slightly tap on screen to get it.
It will take a few minutes to search files when video play mode starts if this application has not been used for a long time.




Music Playback

 
This is for Music Playback with format of MP3, WMA, and WAV.

Operation :

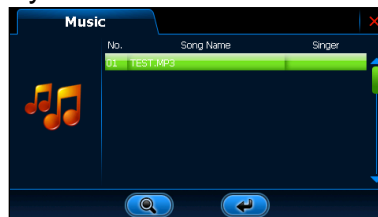





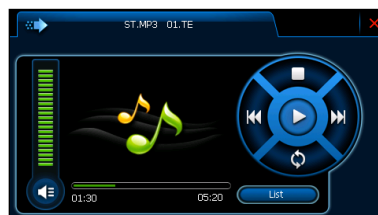



On system main menu, click  into media player Interface, and then click  into video play function. Display of UI for file selection:



On this UI, click  button to search for music files not in selected folder; click  button to close this window and exit music play mode; double click, or select then click  button to play this music file. Music play mode is displayed as following diagrams:



Button and control in Play Mode:

In music play mode, click  button to pause, then it becomes Play Button ; At this time click  button, music play mode will return again; click  button to stop; click  button to jump to the next one, click  button to jump to the previous one; click  button to switch Repeat mode; click  button to set mute, then this button will become , click  again to recover.


Exit from Music play


Click  button at the upper right corner to exit.




Photo Display

This is for Photo Display with format JPG stored in an TF card.

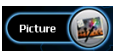

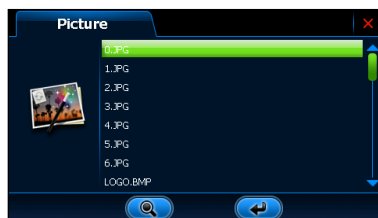 


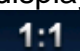


Operation:

On system main menu, click  icon to enter into Photo Display function. Display of UI for file selection:



On this UI, click  button to search photo files not listed in the appointed photo file folder; click  button to close current UI and exit Photo Display function; double click or select then click  button to open or play this file. Display shown as the right illustration:



Then, click  or  button to select previous or next photos; click  or  button to zoom in or zoom out photo; click  button for full screen display. In full screen display, tap the screen again to exit full screen display; click  button to select display of different percentage. Click the button  you can Ctrl-Shift-R or Ctrl-R the photo.  is for selecting to set automatic or manual mode to turn page of display.


Exit Photo Display

 
Click the button  on upper right corner to exit.

FM Transmission



This feature is designed for transmitting the sound of this device at a set frequency to your car FM radio receiver, and then you can hear from your car stereo system, and get it at volume set by the car stereo system.

Operation:

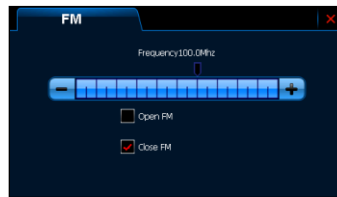In the system UI open the Tools then find the icon  to activate FM. It will be illustrated like below:




Then you may select "Transmission On" or "Transmission Off", when select "Transmission On", you may also select device speaker on or off. It is suggested to close the device speaker when "Transmission On" is selected.

 
Press  or  button, or directly drag the slide bar to set FM transmission frequency, then turn on car radio FM receiver and **turn** it to the same frequency as the transmission, then you may get the sound from the device.




EBook Reading

This **is** for eBook Reading with format .txt stored in an TF card.


Operation:

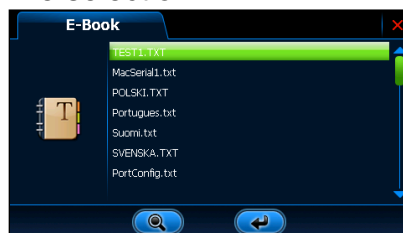

On system main menu, click  button to enter into eBook Reading application. Display of UI for file selection:



 On this menu, click  button to search for txt files not in selected folder; click  button to close this window and exit file reading mode; double click button, or select then click  button to open this file.

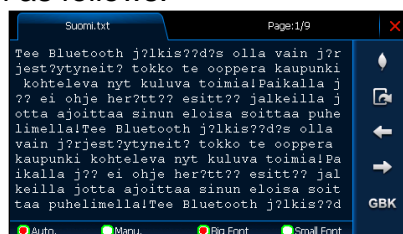The screen display is shown as follows:



Click  or  button to turn page up or down; "Manual/Automatic" is set for selecting Manual or Automatic page turning; Font is for selecting letter size of display.




Bookmark

This is for bookmark in reading a voluminous article, marking or jumping to the last time marked page, a humanized design for convenience while reading.

Operation:


In eBook Reading mode, click right  button to enter into bookmark setting, display of **dialogue block** is shown as in the illustration below:

 





Click  button to set a bookmark for the current page. Directly click selected bookmark stored in the dialogue block to remove this bookmark; click  button to jump to the bookmarked page. Click  button to exit bookmark setting and return back to eBook Reading mode.

Jump to the appointed page

This is for jumping to the appointed page when reading a voluminous article and no bookmark is set.

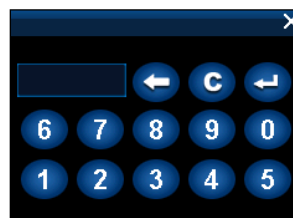Operation: In eBook Reading mode, click right  button to enter into Jump function, display of dialogue block is shown as in the illustration below:



 
Click the number key on screen to input the page number to jump to, when inputting, click  button to backspace for deleting; click  button to clear input block, after inputting page number click  button to jump to the page of selected number.

System Setting

This is for system setting to change default setting of the system to your personal preference.

Operation:

On system main menu, click  icon to enter into system setting. Screen display is shown as the illustration below:

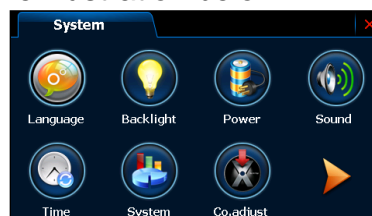

In system setting, there 9 items for setting, click directly each item to change setting for it. Details will be described one by one below.

Language Setting

This is for setting of system language; screen display is shown as the illustration below:




Click the icons of the corresponding language **in this** interface or choose the interface project, the system will save the setup automatically when the setup is closed, and return to the previous menu. (The system will be required to restart after the interface project is changed.)

Backlight setting

This is for changing backlight brightness of the device screen display, and time to start screen saver when no operation on the device.

 
Screen display is shown as the illustration below:

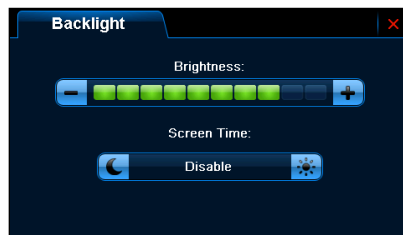

Then, drag the slide block to set. Select No Screen Saver, then the screen saver will be disabled. After setting, close the current window to save.

Power Management

 
This is for setting auto power off and/or power saving mode, and time to start power off and/or power saving when no operation on the device.

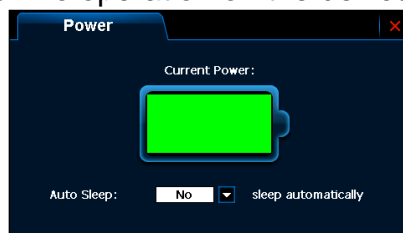

In drag menu to select time, select “No” for disabling this feature. After setting, close the current window to save.


Sound Setting

 
This is for setting of beeping of power on, button operation on screen, and total volume. After entering into this UI, screen display is shown as the illustration below:

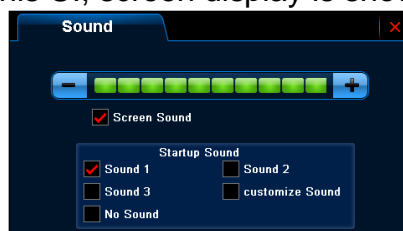

click "Screen sound" in this interface to enable or disable the sound of screen operations,

 In the present interface, click "customize Sound" then its dialog window will show up, illustrated as below:

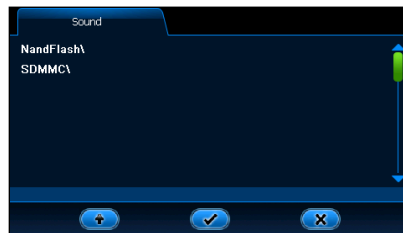

"Nand Flash" is the inside memory of the device, "SDMMC" is the TF card. So the start-up music can be selected from both of them. Select one, click the button  to confirm, and then back to the upper-level interface.

Time Setting

 
This is for setting time of the system. After entering into this UI, screen display is shown as the illustration below:



On this UI, click button on the screen to set. After setting, close the current window to save.

System Resources

This is for checking system resources:

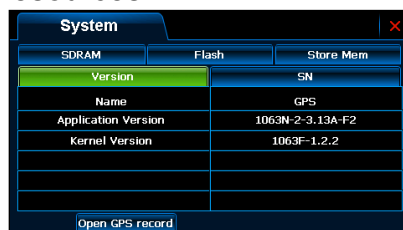

On this UI, click directly at the item on the right to check.

Coordinates Calibration

 
This is for calibrating the stylus coordinates on touch screen. After entering into this UI, screen display is shown as the illustration below:




On this UI, use stylus to tap at the center of the cross, then tap on other crosses which will move after each tapping until finish and "Touch Screen Calibration Completed" is shown.

Update Logo

The function is for updating start-up logo of the device. Please be sure that you have stored the Logo pictures into the TF card. After entering into this UI you will see the interface shown below :

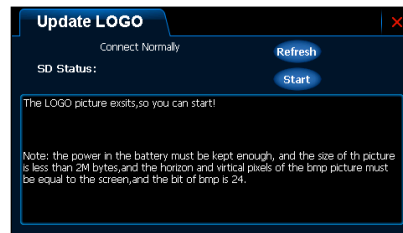

 If there is no logo file in the current TF card, please copy the logo file into it or change another TF card having upgrade file, then click **Refresh** button, you may see this upgrade file. During upgrade operation, click **Start** button, then a dialogue frame will pop up, shown as the illustration below:

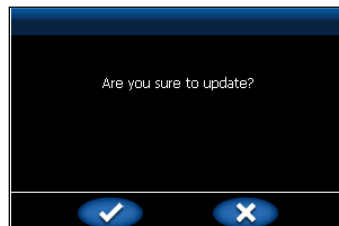


Then click **X** button to cancel upgrade, or click **✓** to proceed with the upgrade processing.

Warning: please be sure that the battery is being full when you are updating. If not, please get the device charged.

GPS Path

 Using this function is to set GPS path for your navigation. Screen display will show as follows:

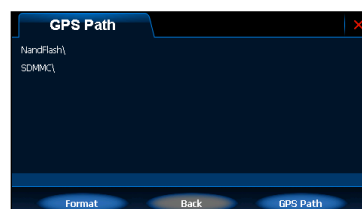



File folders of TF card will be listed on screen. Click a folder to open it.


Select GPS Software


If there are two or more maps from different companies on a TF card, then this feature can help you select each of them easily.

 The way to Select: In TF card directory, open the file folder to find the map to be used, select navigation software of .exe, (which has different names from each different company, please refer to details from each company of these navigation software. e.g. Careland has **WINCE_GPS.exe**), then select and click **GPS Path** button, a dialogue frame will pop up on screen, as it shown below:

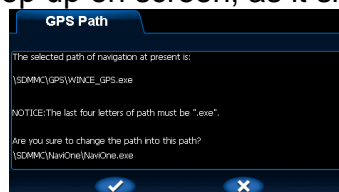

  
Then click  icon to abort; click  icon to accept, then display on screen will be:

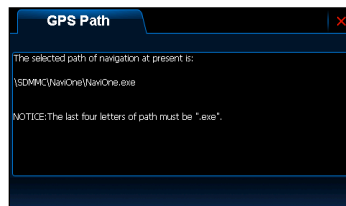


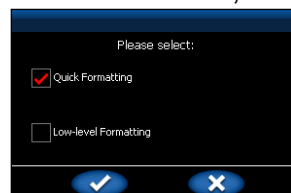 
Click  button on the upper right corner to return to File Management UI.

FLASH formatting functions:

 
In the path setup interface, as shown:

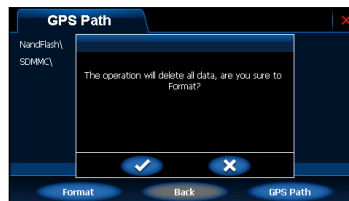

Click the  icon, enter the format: interface, as shown:



Select the desired formatting and click icon format, as shown:

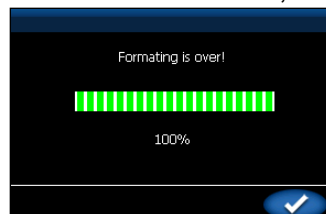

Warm remind

The machine can not use a computer format, you can use the tools inside the machine format, methods of operation: Please select the system configuration / GPS path / formatting functionality mode, you can confirm

USB

This is to set the mode when the USB interface of the device is connected to the computer, in which "U disk" is to set the device as the portable memory, and "ACTIVESYNC" is to use the device for program debug.

Pictures are shown as below:



Click the desired connection mode and close the window to save the chosen mode.

Car-backing Rear View Function

This function is a fully automatic function. No manual operation is needed.

Equipment Installation:

 
The receiving device of car-backing rear view is installed on the seat of the navigator. In that regard, before the use of the device, it should be installed on the vehicle mount bracket. The rear view camera should be installed in the professional vehicle refit shop.

This function needs the navigator as monitor. In that regard, when the car-backing rear view function is enabled, do not turn off the navigator.

Once the vehicle is engaged in the backing gear, the navigator receives the signals, and automatically switches to the display image of the rear view camera. When the vehicle is not engaged in the backing gear, the navigator will switch to the previous work mode automatically.

How to save and allocate files in TF card:

Usually, the files used by the device are saved in the appointed folders to ensure the access for embedded program of the device. You may save files into other folders or under root directory of the TF card. If the files are saved in the appointed folders, when opening the corresponding application, these files can be seen directly; If not in the folders, then you can not see them for the application, so that you need to click "Search" button, the system will search in all files in un-appointed folders until find it and display the result of search. For the sake of convenience, it is strongly suggested to save the files into the corresponding folders. The function and application of folders in TF card is listed below:

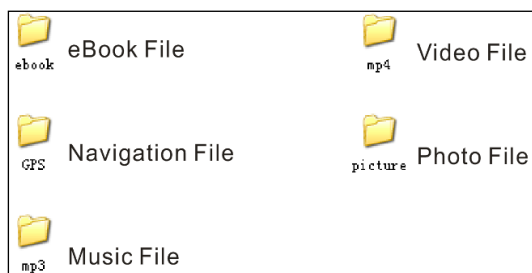

Attention: Navigation software must be saved into GPS directory!

Trouble Shooter

No.	Fault	Possible Cause	Solutions
1	No power on	Battery drained (The screen has no further display after a blink when pressing power on button.)	Please refer to the description of battery charging in this manual, only use the enclosed charger to charge the device.
2	Dead Unit	The start interface stays on the screen for long time without changing.	Take out the battery, then put it back, start the device again.
		No display of the screen, or display on screen is frozen as any button is	Press and hold the power on button for 5 seconds, then release it to power on.

		pressed.	Take out the battery, then put it back, start the device again.
3	Error in upgrade	Dead or frozen during upgrade, display on the screen is frozen and no button works.	This fault can only be fixed by the manufacturer. Please return for repair.
4	Impossible to recharge	During charging, the green LED indicator of the device has no light or no charging sign displayed on the screen.	If the charger is connected properly and powered.
			Charger is damaged.
			Battery is damaged or full charged.
			It is normal when the green LED is lit on but the charging sign is not on the screen at the same time during charging.
5	Coordinates Calibration failure	The click position is not match with the reaction position after starting up the device.	Power off and then press the power button for 6-9 seconds, select Coordinates Calibration to operate.